


How to Choose the Correct Generator



Three simple steps to selecting the correct generator to pair with your GenerLink transfer switch.

For more information on how to find out which generator is right for you, refer to the **GenerLink Operation Manual**.

- 1 Your generator must have one of these receptacles:

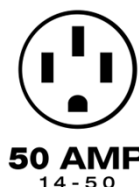

- 2 Your generator must be in these wattage ranges:



Generator Wattage
4800 – 9,600 Running Watts

- 3 Your generator must **NOT** have a full GFCI panel

